


MultiDuct Installation Instructions


Compliant with Network Rail Specifications

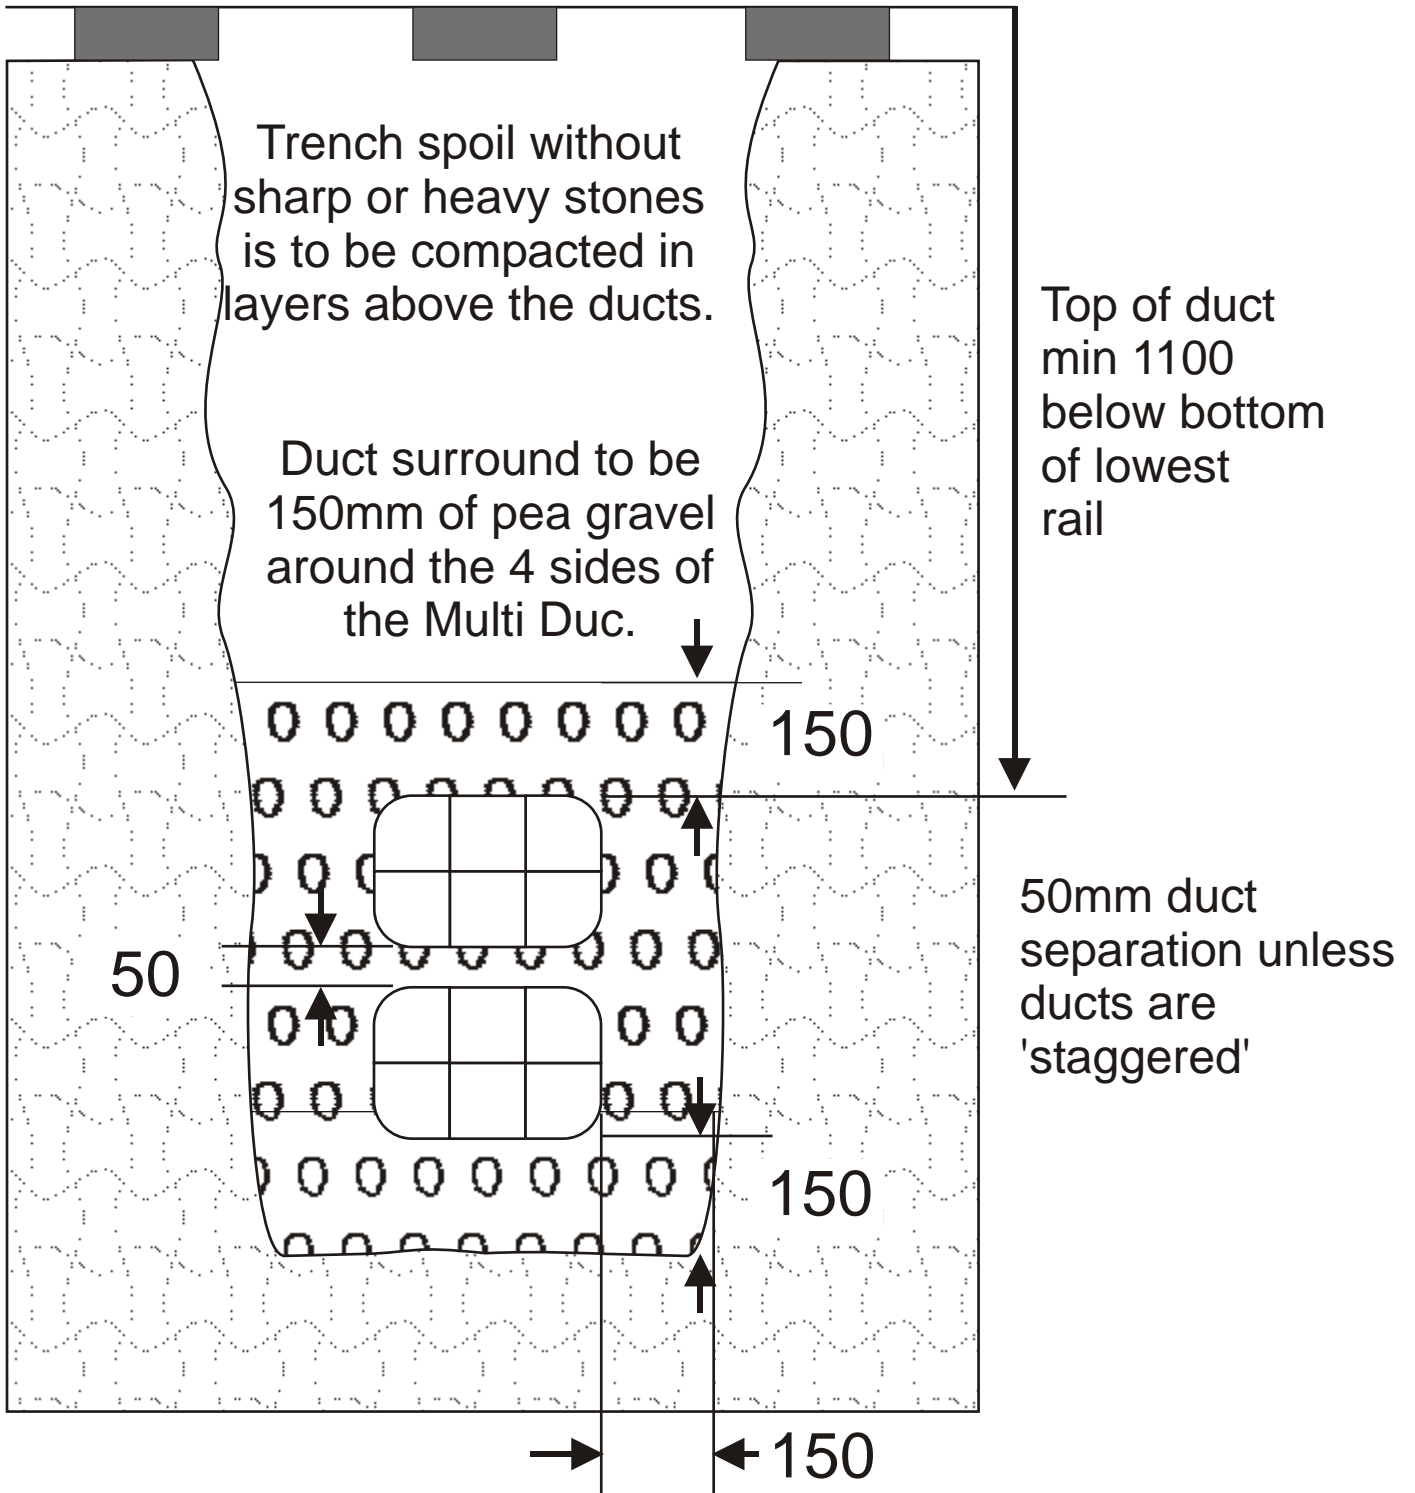


MultiDuct Installation Instructions

Compliant with Network Rail Specifications

Staggered Layout. Ducts offset along the trench and laid one on top of the other.

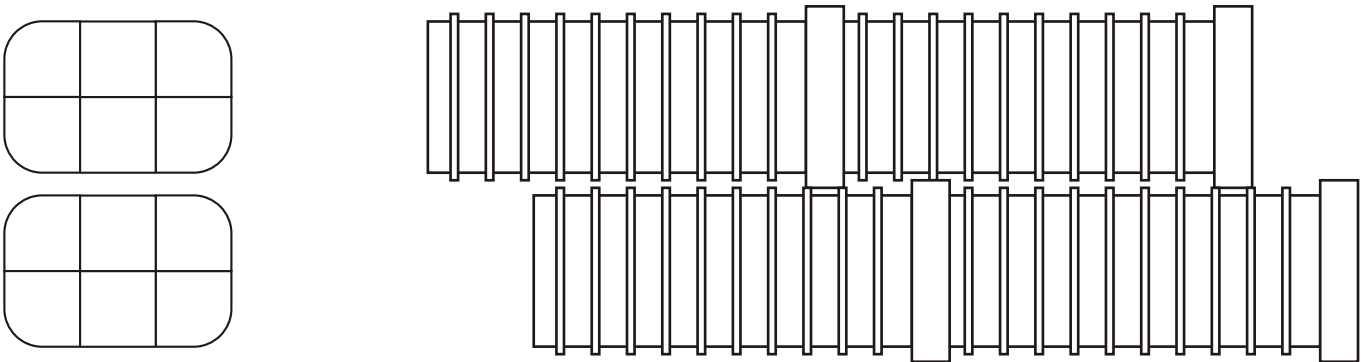


In Line Layout. Ducts separated 50mm vertically to allow clearance between the spigot joints.

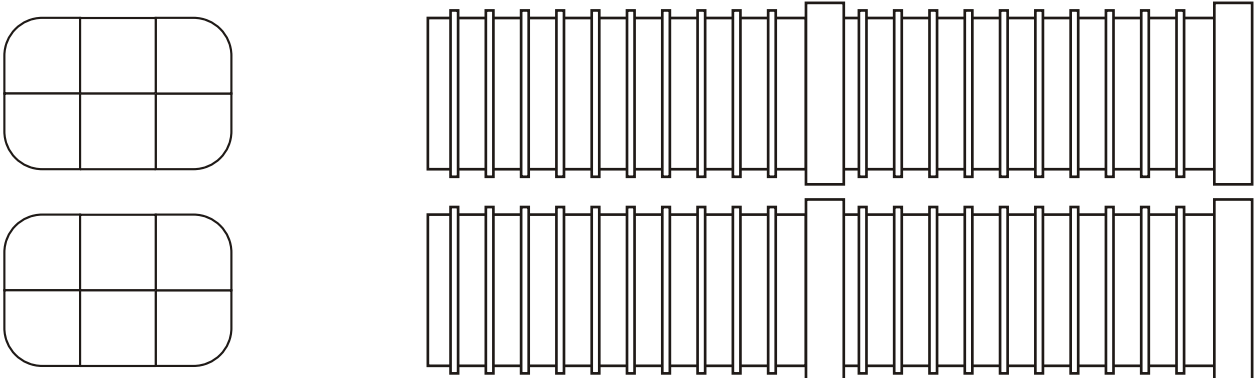


MultiDuct Assembly Instructions

Present duct end at an angle into spigot (bell) end.

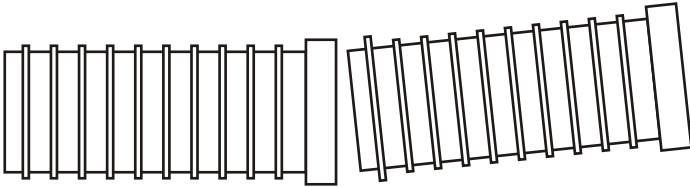

Insert at an angle.
Apply 4 clips to top edge

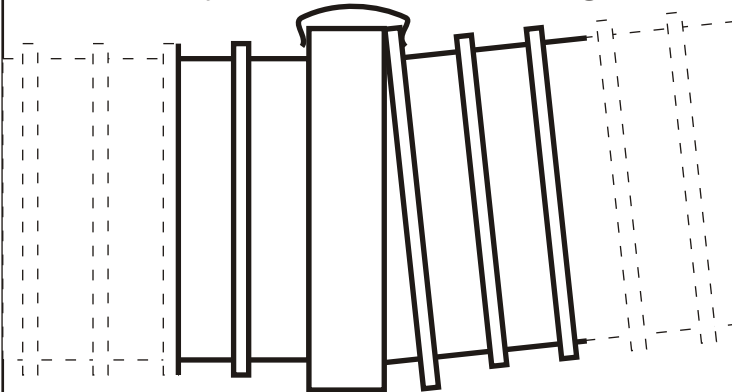

Align ducts. Tap clips around to sides and bottom edge.

